

N
DigitalTalk MAX™ 2100
Owner's Manual

Table of Contents

Chapter 1: Getting Started	1
Phone Activation	1
Phone Safety & Performance.....	1
NEC Authentic Accessories™	1
Connecting & Disconnecting the Battery.....	1
Charging the Battery	2
NiCd and NiMH Battery Charging Times	2
Voice Mail Messaging & Text Messaging	2
Phone Password.....	2
Phone Layout.....	3
Display Icons.....	3
Menu Tree Overview	4
Menu Navigation Keys	4
Chapter 2: Basic Operations.....	5
Turning On Phone.....	5
Turning Off Phone.....	5
Standby Mode	5
Signal Strength.....	5
Battery Charge Indicator	5
Placing a Call	6
Ending a Call	6
Answering a Call	6
Adjusting Earpiece Volume	7
Adjusting Keypad Volume	7
Accessing and Navigating Menus	7
Setting Ringer Volume	7
Selecting Ringer Type.....	7
Viewing Your Phone Number	7
Retrieving Voice Mail	8
Retrieving Text Messages.....	8
Using the Phone Book	8
Setting the Time and Date	8
Chapter 3: Menus	9
Menu Navigation	9
Main Menu.....	9
1. Call Logs.....	10
Dialed (Calls Log).....	10
Received (Calls Log).....	10
Missed (Calls Log)	10
Air Time	11
Clearing Call Logs & Air Time Counter	11
2. Phone Book	11
Add to Phone Book	12
View by Name	13
View by Location.....	13
Viewing by (Phone) Number	13
Locking the Phone Book	13
Clearing the Phone Book	13

Table of Contents

3. Message	14
Voice Messages	14
Text Messages	15
Text Message Viewer	16
SMS Menu	16
Clear All Text Messages	17
Store As Voice Mail Number	17
4. Settings	17
Lock	18
Auto Lock	18
Set (Change) Password	18
Call	18
Any Key Answer	18
Analog/Digital Call Type	18
DTMF Length	19
Transmit DTMF tone	20
Text Message	20
Roll Off Order	20
Word Wrap	20
Sort Order	21
Audio	21
Ring volume	21
Ring type	21
Escalating alert	21
Network	22
Voice Privacy	22
Select System	22
Select Phone Number	23
Clock	23
Set Clock	23
Set Alarm, Auto On, Auto Off	23
Environment	24
One-Touch Dialing	24
Fixed Digit Dialing	24
Language	25
Wakeup Message	25
Handsfree	25
Handsfree Switch	25
Backlight	26
Auto Answer	26
Reset Settings	26
5. Lock/Unlock Keypad	26
6. Silent Mode	27
7. Non Pub(lic) Mode	27
Acquire New System	27
Search for System	28
View Stored Systems	28

Table of Contents

8. Digits Editing.....	29
Manual pause.....	29
Auto Pause.....	30
9. Mute.....	30
Mic Mute.....	30
All Mute	30
Unmute.....	30
0. Lock Phone.....	31
Chapter 4: Safety & Performance.....	32
Safety Precautions	32
Phone Performance	35
Technical Information.....	35
Battery Care & Disposal	35
Chapter 5: Warranty & Service	36
Limited Warranty	36
NEC Service Support.....	38
NEC Wireless Marketing	38
Index.....	39

Chapter 1: Getting Started

Phone Activation

Before you can use your new NEC cellular telephone, the phone must be activated by a cellular service provider. Please contact your local cellular service provider for any questions regarding phone activation.

Phone Safety & Performance


Prior to operating your cellular phone, please read this manual thoroughly including Chapter 4, "Safety & Performance" on page 32.

NEC Authentic Accessories™

NEC recommends using only NEC Authentic Accessories with your cellular phone to ensure optimum quality performance.

Connecting & Disconnecting the Battery

Your phone is powered by a rechargeable battery. (See "Battery Care & Disposal" on page 35 for important battery information.) To connect the battery to your phone, place the grooved end of the battery against the base of the phone. Lower the battery toward the phone to lock into place. To remove the battery, check that the phone is turned off. Slide the locking latch located above the battery upward and carefully lift the battery away from the phone.

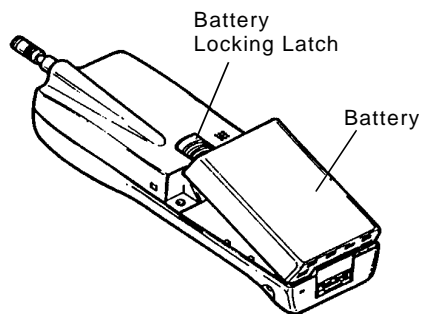


Charging the Battery

A new phone battery must be fully charged before being used for the first time. The phone battery can be charged through one of two setups.


Setup 1: Phone & AC Adapter Only

Plug the AC adapter into a standard AC electrical outlet. Insert the adapter plug into the jack located on the side of the phone.

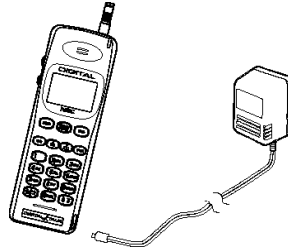

Setup 2: Phone, AC Adapter, & Charging Stand

Plug the AC adapter into a standard AC electrical outlet. Insert the adapter plug into the charging stand jack. Place the phone in the charging stand. The red LED indicator on the charging stand illuminates while the battery is charging.

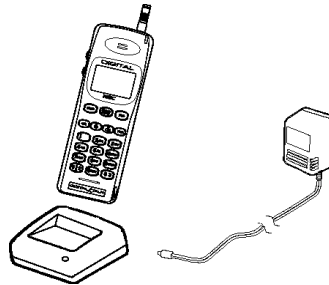

NiCd and NiMH Battery Charging Times

	<u>With Standard Charger</u>	<u>With Rapid Charger</u>
NiCd	~10-12 hours	~ 1.5 hours
NiMH	~15 hours	~ 1.5 hours


Voice Mail Messaging & Text Messaging

Voice mail messaging and text messaging services, when available, are provided by your cellular service provider. Before you can receive either voice or text messages with your phone, you must subscribe to these cellular service provider options. Contact your cellular service provider for information on availability and setup of these services. See "Voice Messages" on page 14 and "Text Messages" on page 15 for information on retrieving messages.

Phone Password





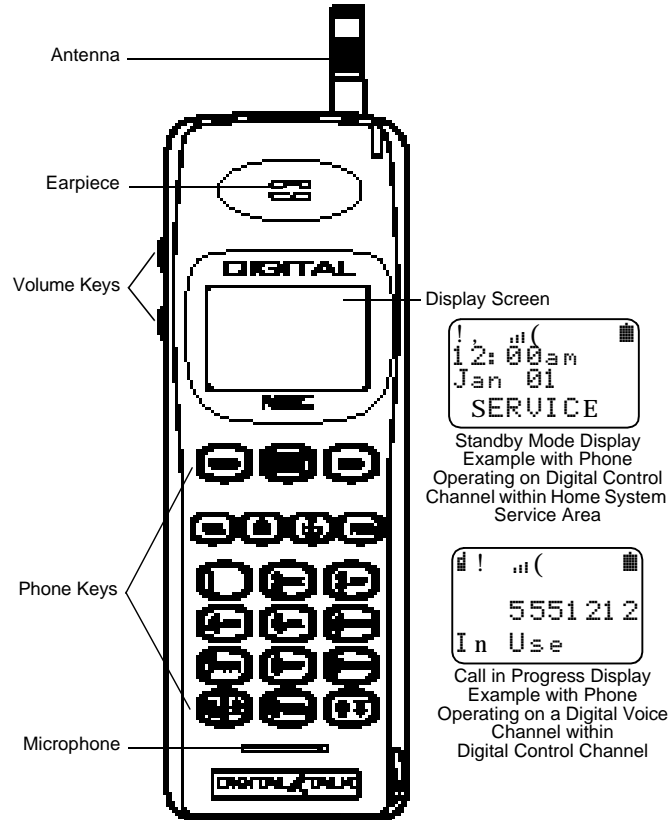

When your phone is activated, a 4-digit password is programmed into the unit. The password locks and unlocks your phone, and provides access to restricted phone settings. Check with your cellular service provider for information on your security password.

Phone Layout

 




Display Icons







Service Indicators

-  or  Digital or Analog Channel In Use
-  or  Home or Roam System Service In use
-  or  Roam System A or B In Use


Call & Message Indicators

-  Call in Progress
-  Voice Mail Message Received
-  Text Message Received

Operation Indicators

-  Battery Charge Indicator (fully charged status shown)
-  Cellular Signal Strength
-  Battery Charging in Progress
-  Phone Lock Setting Activated
-  Alarm Clock Setting Activated
-  In Standby, Keypad Volume Adjusted; During Conversation, Earpiece Volume Adjusted

Menu Tree Overview

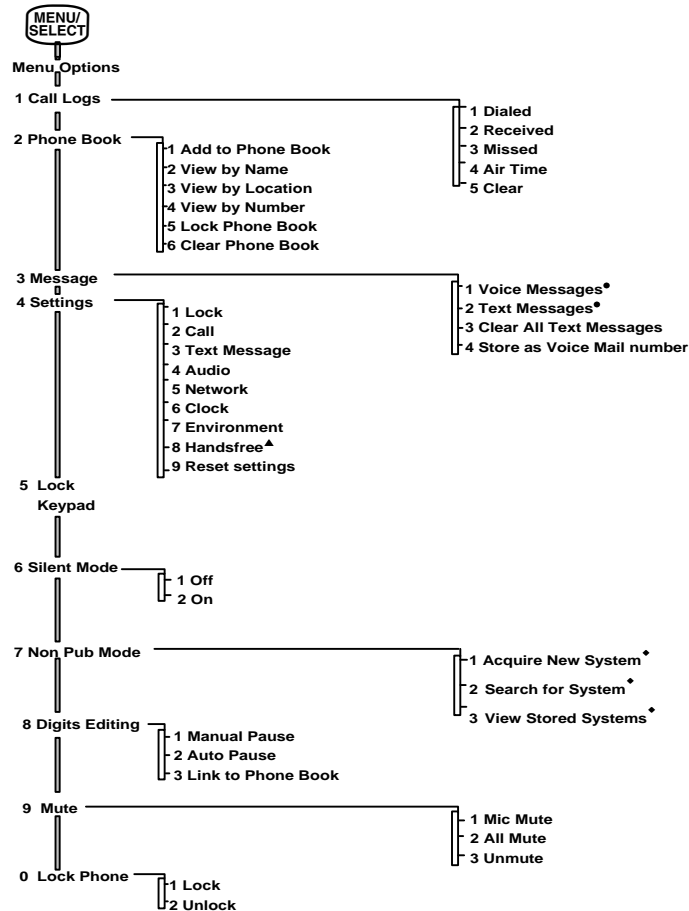


- Check with your cellular service provider for availability and service.
- ▲ Only available when phone is used with a handsfree adapter.
- ◆ Must have rights to a non-public or private system.

Menu Navigation Keys


Key	Action	Key	Action
	Display Main Menu or select a flashing menu or submenu selection.		Exit any menu and return to standby state display.
and	Scroll to view entire menu and submenu contents.		Press to return to next higher menu level; press and hold to return to standby mode display.

Chapter 2: Basic Operations


Turning On Phone

Press and hold the  key for approximately two seconds to turn on the phone.

The cellular signal strength indicator, the battery charge indicator, the time, the date, and the cellular service provider indicator appear on the display. (See “Display Icons” on page 3.)

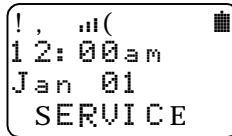


Turning Off Phone

Press and hold the  key for approximately two seconds to turn off the phone.


Standby Mode

Once the phone is powered on, the phone enters the standby mode. (The above screen illustration depicts the phone in standby mode.) The standby mode remains displayed until a call is placed or received, a menu is accessed, or the phone is powered off.

Signal Strength

The cellular signal is indicated on the display as  with the maximum of six bars indicating a strong signal. Although you can use the phone without extending the phone antenna, extending the antenna can increase the strength of the received cellular signal.

Battery Charge Indicator

The battery charge indicator () shows the charge level of the battery. When the battery charge drops to a low level, the phone displays the following warning message:

RECHARGE BATTERY

While displaying the recharge notification, the phone also sounds a double beep up to six times at 10-second intervals. The phone then automatically powers off. See “Charging the Battery” on page 2.

Placing a Call

With the phone in the standby mode, key in the telephone number and press **SEND**. The phone icon (📞) appears indicating the phone is in use.

Correcting Digit Entry Error

If you make a mistake entering a phone number, press **CLR** once to delete the last entered digit, or press and hold **CLR** to erase all of the entered digits.

Dialing a phone number stored in phone book

With the phone in the standby mode, press **☎** to access the phone book, use the **⬅** or **➡** keys to locate the desired phone number, and press **SEND**.

Calling Last Number Dialed

With the phone in the standby mode, press **SEND** to call the last number dialed.

Dialing a phone number on scratchpad

During a call, you can use your phone as a notepad or scratchpad to record a phone number provided to you. Once the call in progress is completed and you press **END** to terminate the call, you can dial the displayed scratchpad phone number by pressing **SEND**. See "Adding Numbers from Scratchpad to the Phone Book" on page 12 for storing the scratchpad information to your phone book.

Ending a Call

Press **END**. Note that if you are within the menu system (see "Menu Navigation" on page 9), pressing **END** once only exits the menu system; pressing **END** twice returns the phone to the standby mode and ends the call.

Answering a Call

When the phone rings, press **SEND** to answer the call.

Caller Identification

If caller identification is available in your area, the phone number and/or name of the incoming call may be displayed when the call is received. Contact your cellular service provider on the availability of caller identification.

Call Waiting

If call waiting is available in your area, the phone sounds a tone during a call in progress to indicate a second call is incoming. To answer the incoming call, press **SEND**; press **SEND** again to return to the initial call in progress. Contact your cellular service provider on the availability of call waiting.

Any Key Answer Setting

If the any key answer setting is turned on, any key except **PWR** or **END** can be pressed to answer an incoming call. See "Any Key Answer" on page 18.

Ring Alert

The type and volume of the incoming call ringer alert can be adjusted. See "Selecting Ringer Type" on page 7 and "Setting Ringer Volume" on page 7.

Adjusting Earpiece Volume

The volume keys located on the side of the phone can be used to adjust the earpiece volume during a phone call. With a call in progress, press **▲** to increase or press **▼** to decrease the earpiece volume.

Adjusting Keypad Volume

The volume keys located on the side of the phone can be used to adjust the keypad volume. With the phone in the standby state (no call in progress), press **▲** to increase or **▼** to decrease the keypad volume.

Accessing and Navigating Menus

The phone menu can be accessed by pressing the **MENU/SELECT** key. By pressing **MENU/SELECT**, the Main Menu is displayed. The contents of menus and submenus can be viewed by pressing **▲** or **▼**. See Chapter 3, "Menus" on page 9.

Additional Menu Selection Information



For several menu selections, additional usage information is provided to assist you with making the appropriate selection. These helpful usage tips are identified with the marker shown on the left.


Setting Ringer Volume

The incoming call ringer volume can be set to one of five settings. Press **MENU/SELECT** **4 GHI** **4 GHI** **1**. The ring volume menu appears with the currently selected ring volume setting flashing on the display. The available settings are 1 for minimum, 2 for low, 3 for medium, 4 for high, and 5 for off (no ringer). Press the corresponding number for the desired ringer volume setting. The phone rings your selection. Press **END** to save your selection and exit the ring volume menu.


 
Selecting Ringer Type

The incoming call ringer alert can be set to one of four selections. Press **MENU/SELECT** **4 GHI** **4 GHI** **2 ABC**. The ring type menu appears with the currently selected ringer selection flashing on the display. The available settings are 1, 2, 3, and 4. Press **1**, **2 ABC**, **3 DEF**, or **4 GHI** to hear the selected setting. The phone rings your selection. Press **END** to save the selected setting and exit the ring type menu.

Viewing Your Phone Number

To view the phone number of your cellular phone, press  with the phone in the standby mode. The phone number appears on the bottom line of the display for approximately three seconds.



Retrieving Voice Mail

If voice mail service is available through your cellular provider, you can easily retrieve your voice mail messages by pressing   with the phone in the standby mode. If the voice mail retrieval phone number has been set up in your phone, the phone number is automatically dialed. Follow your cellular service provider instructions for voice mail retrieval.





Storing Voice Mail Number

See "Store As Voice Mail Number" on page 17.



 








Retrieving Text Messages

If text messaging service is available through your cellular provider, you can easily view any text messages received in your phone by pressing   with the phone in the standby mode. See "Text Messages" on page 15.

Using the Phone Book




Up to 99 phone numbers can be stored in the phone book. Once phone number entries are stored, the phone book is at your fingertips for easy dialing. To dial a phone number stored in the phone book, press  with the phone in the standby mode to access phone book. Use the  or  keys to locate the desired phone number and press . To add, view, edit, or delete phone book entries, see "2. Phone Book" on page 11.




Setting the Time and Date

To access the clock menu for setting the correct time and date, press    . The current time and date settings are displayed. Key in the correct hour; press . Key in the correct minutes; press . Press  to select either a.m. or p.m. Key in the correct month by entering in the corresponding number from 1 through 12 for the desired month; press . Key in the correct day of the month from 1 through 31; press . If the correct year is displayed, press  to save the clock entry and to exit the clock menu. (Note that to enter the date "February 29" during a leap year, the year must be entered before the day.) If the correct year is not displayed, key in the corresponding four digits of the correct year, and press  to save the time and date settings, and to exit the clock menu.

Chapter 3: Menus


Menu Navigation

The phone contains menus and submenus to access and select the phone settings. You can navigate through all menus and submenus by using the  and  keys to scroll through the menu listings. Each of the menu and submenu listings has an assigned menu or submenu number. You can select and access a menu by pressing the assigned menu number on the keypad or by pressing  when the desired menu listing is flashing on the display.



You can return to the previously displayed menu by pressing . You can return to the standby display by pressing  or by pressing and holding .

You can quickly access menus by using the assigned menu and submenu numbers as shortcuts. Note that the menu shortcuts are provided for each menu and submenu.

Main Menu

The main menu contains all of the menu and submenu settings. With the phone in the standby mode, the main menu can be accessed and displayed by pressing . The main menu is displayed below.

```
Main menu
1 .Call
  Logs
2 .Phone
-----
  Book
3 .Message
4 .Settings
5 .Lock
  Key Pad
6 .Silent
  Mode
7 .Non Pub
  Mode
8 .Digits
  Editing
9 .Mute
10 .Lock
  Phone
```


Use  and  to scroll through and view the entire Main Menu



1. Call Logs

Menu Shortcut

MENU/SELECT 1

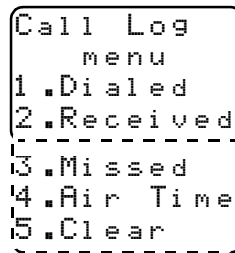With the phone in the standby mode, the Call Log Menu can be accessed by pressing **MENU/SELECT** 1. The Call Log Menu is displayed below.





Use  and  to scroll through and view the entire Call Log Menu

Dialed (Calls Log)

Menu Shortcut



MENU/SELECT 1 1

Your phone maintains a list of up to 20 of the last phone numbers you dialed. To view the list of the last 20 outgoing calls, press **MENU/SELECT** 1 1¹. Scroll through the contents of the dialed phone number log using  and . Press **SEND** to dial a displayed phone number in the log or press **END** to exit the dialed phone number log.

Received (Calls Log)

Menu Shortcut



MENU/SELECT 1 2 ABC

Your phone maintains a list of up to 20 of the last incoming calls you received. To view the list of the last 20 incoming calls, press **MENU/SELECT** 1 2 ABC¹. Scroll through the contents of the received phone number log using  and . Press **SEND** to dial a displayed phone number in the log or press **END** to exit the received phone number log.

Missed (Calls Log)

Menu Shortcut

MENU/SELECT 1 3 DEF

Your phone maintains a list of up to 20 of the last incoming calls you missed. To view the list of the last 20 unanswered calls, press **MENU/SELECT** 1 3 DEF¹. Scroll through the contents of the missed phone number log using  and . Press **SEND** to dial a displayed phone number in the log or press **END** to exit the missed phone number log.

1. If the dialed, received, or missed phone number log does not contain any call information, the phone beeps and the call log menu remains displayed when an attempt to view the log is made.

Air Time Menu Shortcut MENU/SELECT 1 4 GHI

Your phone automatically maintains a log of the total air time usage. The air time counter can be viewed by pressing MENU/SELECT 1 4 GHI. The time counter for the air time usage in your cellular provider service area (indicated with an "H" for home system) and the air time usage outside your cellular provider service provider (indicated with an "R" for roam system) are displayed. Press END to exit the air time log.

Clear Call Logs & Air Time Counter Menu Shortcut MENU/SELECT 1 5 JKL



The phone numbers maintained in the call logs and the air time usage log can be cleared with all contents completely erased. To clear one or all of the logs, press MENU/SELECT 1 5 JKL. Select 1 to clear the dialed phone number log, 2 ABC to clear the received phone number log, 3 DEF to clear the missed phone number log, 4 GHI to clear the air time log, or 5 JKL to clear all of the logs. Press 2 ABC for Yes. Press CLR or END to exit the call log clear menu.

2. Phone Book Menu Shortcut MENU/SELECT 2 ABC

With the phone in the standby mode, the Phone Book Menu can be accessed by pressing MENU/SELECT 2 ABC. The Phone Book Menu is displayed below.

```

Phone Book
1.Add to
Phone Book
2.View by
-----
   name
3.View by
location
4.View by
number
5.Lock
Phone Book
6.Clear
Phone Book
-----
  
```

Use  and  to view the entire Phone Book Menu

Add to Phone Book | Menu Shortcut

To add a phone number to the phone book, press **MENU/SELECT** **2 ABC** **1**. Enter the phone number you want to add to the phone book and press **MENU/SELECT**. Use the keypad to enter a name associated with the phone number. By repeatedly pressing a key, the characters shown in the table below can be included in a phone book entry name. You can enter a name of up to 10 characters with any blank space or symbol counted as a character. Press **#** **↓** to insert a blank space or to advance the cursor to the next character position when entering a name.

Key	Characters	Key	Characters
1	1 .	7 PQRS	7 PQRS pqrs
2 ABC	2 ABC abc	8 TUV	8 TUV tuv
3 DEF	3 DEF def	9 WXYZ	9 WXYZ wxyz
4 GHI	4 GHI ghi	0 OPER	0
5 JKL	5 JKL jkl	* +	& - # *
6 MNO	6 MNO mno	# ↓	blank spaces

After the name is entered, press **MENU/SELECT**. Press **MENU/SELECT** again to accept the displayed (next available) speed dial location, or specify another speed dial location and press **MENU/SELECT**. Note that if you enter another speed dial location instead of accepting the displayed next available location, a phone book entry currently stored in the specified location could be overwritten and deleted.

Adding Numbers from a Call Log to the Phone Book

If you want to add a phone number from a call log to your phone book, display the call log entry containing the desired phone number. Press **MENU** to access the phone book menu. Press **1** to add the number to the phone book and follow the steps described in "Add to Phone Book" on page 12.

Adding Numbers from Scratchpad to the Phone Book

During a call, you can use your phone as a scratchpad to record a phone number. Once the call in progress is ended, you can either dial the scratchpad phone number (see "Dialing a phone number on scratchpad" on page 6) or you can store the scratchpad number to the phone book. With the scratchpad phone number displayed, press **MENU/SELECT** **2 ABC** **1**. As prompted, enter a name and complete the phone book addition following the steps described above.

The phone book entries can be recalled using the name stored with the phone number, the speed dial location number, or the phone number itself.

View by Name | Menu Shortcut |

To recall a phone book entry by name, press .

Enter the first letter(s) of the desired phone book entry name and press . If necessary, use the and keys to locate the phone book entry. Press to dial the phone number or press to exit the phone book.

View by Location | Menu Shortcut |

To recall a phone book entry by the speed dial location number, press . Enter the location number and press . Press to dial the phone number or press to exit the phone book menu.

View by (Phone) Number | Menu Shortcut |

To recall a phone book entry by the phone number, press . Enter the first number(s) of the desired phone number and press . If necessary, use the and keys to locate the phone book entry. Press to dial the phone number or press to exit the phone book.

Locking the Phone Book | Menu Shortcut |

Your phone book can be secured to prevent the contents from being altered or viewed. Locking your phone book also safeguards against the contents being accidentally erased.

To restrict access to your phone book, press . As prompted, enter your 4-digit password. Press for no restrictions on your phone book, to restrict the phone book contents to view only, or to completely restrict access to the phone book. Press to exit the phone book menu.

Clearing the Phone Book | Menu Shortcut |


The phone book contents can be completely erased. To erase the contents, press . As prompted, enter your 4-digit password. Press to clear your phone book. Press to exit the phone book menu.

3. Message

Menu Shortcut



The Message Menu can be accessed by pressing . The Message Menu is displayed below.

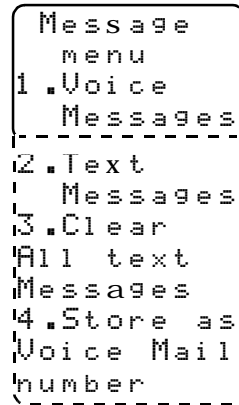

Use and to scroll through and view the entire Message Menu

Your phone can receive voice and text messages. Contact your cellular service provider for information and availability of voice and text messaging.

Voice Messages

Menu Shortcut



When you receive a voice mail message, the following notification displays:

YouHaveVoiceMail

To retrieve your voice mail immediately, press . If your voice mail number has been stored in your phone (see "Store As Voice Mail Number" on page 17), the voice mail system phone number is automatically dialed. Follow your cellular service provider instructions for accessing your voice mail and checking your messages.

If you do not wish to retrieve a voice mail message immediately, press . The voice mail notification is removed from the display; however, with the phone in the standby state, the voice mail icon () and the number of voice mail messages appear on the display. If the voice mail phone number is stored in your phone, you can retrieve messages at any time by pressing or .

Text Messages

Menu Shortcut



When you receive a text message, your phone sounds an alert and displays a notification. The alert and the displayed notification vary depending on the type of received text message. The types of text messages, the displayed notifications, and the alerts are shown below.

Type of Text Message	Displayed Notification	Alert
Normal	XXXNew Messages PressMENU toread	Dual tone alert; repeated one time.
Urgent	XXXNew URGENT Messages PressMENU	Dual tone alert; repeated two times.
Emergency	XXXNew EMERGENCY Messages PressMENU	Dual tone alert; repeated three times.
Bulk	XXxBulk Messages PressMENU toread	Dual tone alert; repeated one time.

XXX in displayed notification equals the actual number of messages received.









To view your text message(s) immediately, press . The first new message is displayed within the text message viewer. Use and to scroll through each line of the message. (See "Text Message Viewer" on page 16 for additional information on navigating within text messages.) The end of a text message is indicated by the following displayed notation:

```
*****
* MSGEND *
*****
```

If you do not wish to view a text message immediately, press . The text message notification is removed from the display; however, when the phone is in the standby mode, the text message icon () and the number of received text messages remain displayed until the text messages are viewed. You can view text messages at any time by pressing or .








 





Text Message Viewer

Text messages are displayed within the text message viewer. The following keys can be used to navigate and operate within the text message viewer.

- | | |
|---|--|
|  | Scrolls down through text messages line-by-line. |
|  | Scrolls up through text messages line-by-line. |
|  | Scrolls to the top of the next text message. |
|  | Scrolls to the top of the previous text message. |
|  | Automatically dials the contact telephone number of text message sender if the sender provided a telephone number within the message. |
|  | Displays the short messaging service, SMS, pop-up menu. The SMS menu is detailed below. |
|  | Briefly displays the percentage of text message memory available and the number of unread and locked messages; then exits the text message viewer. |
|  | Exits the text message viewer. |

SMS Menu

The SMS (short messaging service) Menu within the text message viewer contains text messaging options such as locking or unlocking a message, deleting a message, displaying more or less message details, and displaying text messages based on message urgency or arrival time.

1. Lock Message With a text message displayed, press  1 to lock a message; the lock indicator () appears on the top line of the text message indicating the message is locked. Press  1 to unlock the message. Note that a locked message cannot be deleted using the SMS menu delete message selection; locked messages can only be deleted through the Message Menu ( 3 DEF  3 DEF  1), page 14.
 2. Delete Message With a text message displayed, press  2 ABC; press  1 to delete.
 3. Display more message details With a text message displayed, press  3 DEF to display a more detailed message header (includes the time and date the text message is sent and received); press  3 DEF again to display a less detailed message header (includes only the time and date the text message is received).
 4. Sort by message urgency With a text message displayed:
 - Press  4 GHI to display the urgent text messages first.
 5. Sort by oldest message
 - Press  5 JKL to display the oldest text messages first.
 6. Sort by newest message
 - Press  6 MNO to display the newest text messages first.
-

Clear All Text Messages

Menu Shortcut
MENU/SELECT 3 DEF 3 DEF

Text messages stored in your phone can be deleted. Press MENU/SELECT 3 DEF 3 DEF. Press 1 to delete all text messages stored in your phone or press 2 ABC to delete only the unlocked text messages stored in your phone. Press 2 ABC (for yes) to complete the deletion of text messages. Press END or CLR to exit the clear text messages menu.

Store As Voice Mail Number

Menu Shortcut
MENU/SELECT 3 DEF 4 GHI

The voice mail system telephone number can be stored into your phone. Once the voice mail telephone number is stored into your phone, voice messages can be easily retrieved by pressing 1 (or MENU/SELECT 3 DEF 1). To store the voice mail telephone number into your phone, key in the voice mail telephone number with the phone in the standby mode; press MENU/SELECT 3 DEF 4 GHI. The following message displays:

VoiceMailNumberhasbeenStoredPressCLR



Press CLR or END to exit the store as voice mail number setting.

4. Settings

Menu Shortcut
MENU/SELECT 4 GHI

The Settings Menu can be accessed by pressing MENU/SELECT 4 GHI. The Settings Menu is displayed below.

```
Setting
  menu
1.Lock
2.Call
-----
3.Text
  Message
4.Audio
5.Network
6.Clock
7.Environment
8.HandFree
9.Reset
settings
```

Use  and  to scroll through and view the entire Settings Menu

Lock | Menu Shortcut |

Menu Shortcut
(MENU/SELECT) 4 GHI 1

Auto Lock | Menu Shortcut |

Menu Shortcut
(MENU/SELECT) 4 GHI 1 1

To protect your phone from unauthorized usage, you can set your phone to automatically lock when it is turned on. With the phone in the standby mode, press (MENU/SELECT) 4 GHI 1 1. As prompted, enter the 4-digit password. Press (2 ABC) to set the automatic lock selection to on.

If automatic lock is set to on, the phone is locked when it is powered on. To unlock the phone, press (MENU/SELECT) 0 OPER, enter the 4-digit password as prompted, and press (2 ABC) for unlock. Press (END) to exit the lock menu. To deactivate the automatic lock setting, press (MENU/SELECT) 4 GHI 1 1, enter password, and press (1). Press (END) to exit the lock menu.

Set (Change) Password | Menu Shortcut |

Menu Shortcut
(MENU/SELECT) 4 GHI 1 2 ABC

The 4-digit password used to access all secured menu selections and to lock the phone can be changed. Press (MENU/SELECT) 4 GHI 1 2 ABC. As prompted, enter the current 4-digit password and then enter the desired new 4-digit password. Press (MENU/SELECT). The phone automatically resets and powers on again. The new password must now be entered to access secured menu settings.

Call | Menu Shortcut |

Menu Shortcut
(MENU/SELECT) 4 GHI 2 ABC


 
Any Key Answer | Menu Shortcut |

Menu Shortcut
(MENU/SELECT) 4 GHI 2 ABC 1

With the any key answer setting activated, any key except (END) and (PWR) can be pressed to answer the phone. Press (MENU/SELECT) 4 GHI 2 ABC 1. Press (1) to set any key answer to Off or press (2 ABC) to set any key answer to On. When set to On, you can answer a call with any key except (END) or (PWR).

Analog/Digital Call Type | Menu Shortcut |

Menu Shortcut
(MENU/SELECT) 4 GHI 2 ABC 2 ABC

Your digital phone operates on either a digital or an analog system control channel. As shown in "Phone Layout" on page 3, the current system control channel is indicated on the standby mode display by the  icon for digital or the  icon for analog. Even when your phone is operating on a digital control channel, the voice channel your phone uses

each time a call is either sent or received also can be either digital or analog. (See the following paragraph for information on the use of digital and analog voice channels.) To select the voice channel type, press **MENU/SELECT** **4 GHI** **2 ABC** **2 ABC**; then press **1** for digital call type or **2 ABC** for analog call type. The call type/voice channel currently in use for the call in progress is indicated on the phone display by the **D** icon for digital voice channel or the **A** icon for analog voice channel.



Digital & Analog Voice Channels/Call Types

With the voice channel/call type selection set to digital, your phone uses a digital voice channel, as available, to send and receive calls. If a digital voice channel is not available, your phone then automatically searches for an analog voice channel.

With the voice channel/call type selection set to analog, your phone only uses an analog voice channel to send and receive calls. The restricted use of analog voice channels is necessary if you are using a PCM-CIA data interface card with your phone to send facsimiles or communicate via modem. Note that operating on an analog voice channel consumes the phone battery power at a faster rate than operating on a digital voice channel.

For optimum results and performance, you can set your phone to the digital call type selection and use the analog call type selection, as needed, for use with a data interface card.

DTMF Length **MENU/SELECT** **4 GHI** **2 ABC** **3 DEF**

Your phone can transmit tones, referred to as DTMF tones, when the keys of the phone are pressed. These tones allow your phone to successfully communicate with automated telephone services such as banking transactions and credit card inquiries. You can set your phone to transmit short tones or long tones. (See the following paragraph for additional information on short tone use and long tone use). To select the length of the tone, press **MENU/SELECT** **4 GHI** **2 ABC** **3 DEF**. Press **1** to select the short tone setting or press **2 ABC** to select the long tone setting. Press **END** to exit the DTMF length menu.



Short Tone Use & Long Tone Use

You can access most automated systems by setting your phone to the short tone selection. If you experience any problems communicating with an automated system, set the DTMF length to long and verify that the capability to transmit tones (see the following menu selection, Transmit DTMF Tone) is turned on. Note that you must press and hold a key, up to a maximum of three seconds, to transmit a long tone. Because transmitting long tones can result in slower dialing, you can set your phone to the short tone selection and only use the long tone selection, as needed.

Transmit DTMF Tone Menu Shortcut MENU/SELECT 4 GHI 2 ABC 4 GHI

For your phone to successfully transmit tones, as described "Transmit DTMF Tone" on page 20, for accessing automated telephone systems, the capability to transmit tones must be turned on. (See the following paragraph for additional information on setting tones on or off.) To select the DTMF tone setting, press MENU/SELECT 4 GHI 2 ABC 4 GHI. Press 1 to turn off tone transmission or press 2 ABC to turn on tone transmission. Press END to exit the transmit DTMF tone menu.



DTMF On or Off

Since the ability to communicate with automated systems is frequently needed, you can usually set and maintain the DTMF tone transmit selection to on. If you use the phone scratchpad feature (see "Dialing a phone number on scratchpad" on page 6) to key in a phone number during a call in progress, you can turn off the DTMF selection, as needed, to avoid generating audible tones that can be disruptive during a phone conversation.

Text Message Menu Shortcut MENU/SELECT 4 GHI 3 DEF

Roll Off Order Menu Shortcut MENU/SELECT 4 GHI 3 DEF 1

As described in "Text Messages" on page 15, your phone can receive text messages if text messaging service is available through your cellular service provider. When the phone text message storage is full and more text messages are delivered, existing messages are automatically replaced with the new messages. The order in which the existing messages are replaced, referred to as roll off order, can be selected based on message arrival time or message urgency.

To select the roll off order of messages, press MENU/SELECT 4 GHI 3 DEF 1. Press 1 for existing messages to be replaced based on time and date of message receipt (oldest messages replaced first) or press 2 ABC for messages to be replaced based on message urgency classification (with messages labeled urgent replaced last). Press END to exit the roll off order menu.

Word Wrap Menu Shortcut MENU/SELECT 4 GHI 3 DEF 2 ABC

The display of words within received text messages can be changed using the word wrap setting. The word wrap setting allows you to determine how text breaks within received messages. (See the following paragraph for additional information on enabling or disabling word wrap.) To set the word

wrap selection, press **MENU/SELECT** **4 GHI** **3 DEF** **2 ABC**; press **1** to enable word wrap or press **2 ABC** to disable word wrap.



Enabled or Disabled Word Wrap

With the word wrap selection set to enabled, the word breakage within text messages is limited to words exceeding 10 characters. Because word division is restricted, the messages can be easier to read; however, text messages with word wrap enabled usually contain more lines of text and require additional scrolling.

With the word wrap selection set to disabled, text messages are displayed utilizing each of the 10 character blocks per line. Word breakage is not restricted. Although word breakage may affect readability, the messages with word wrap disabled usually contain less lines of text and require less scrolling.

Sort Order | **Menu Shortcut** |

The order for viewing incoming messages can be set using the sort order selection. Press **MENU/SELECT** **4 GHI** **3 DEF** **3 DEF**; press **1** to view urgent messages first, **2 ABC** to view oldest messages first, or **3 DEF** to view new messages first.

Audio | **Menu Shortcut** |

Ring volume | **Menu Shortcut** |

The ring volume can be set to one of five settings. See "Setting Ringer Volume" on page 7.

Ring type | **Menu Shortcut** |

The incoming call ringer alert can be set to one of four settings. See "Selecting Ringer Type" on page 7.

Escalating alert | **Menu Shortcut** |

The incoming call ringer alert can be set to increase in volume as the phone continues to ring. The initial ring alert sounds at the minimum volume level. As the phone continues to ring, the volume level escalates up to the maximum volume level. To set the escalating alert selection, press **MENU/SELECT** **4 GHI** **4 GHI** **3 DEF**. Press **2 ABC** to turn on escalating alert or press **1** to turn off escalating alert. Press **END** to exit the escalating alert menu.

Network | Menu Shortcut |

Voice Privacy | Menu Shortcut |

Voice privacy is an enhanced security feature available through some digital cellular service providers. Voice privacy encrypts or scrambles the voice channel to ensure a telephone conversation is secure and private. For your phone to utilize the cellular service provider's enhanced voice privacy feature, the voice privacy setting in your phone must be turned on. To set the voice privacy selection, press **MENU/SELECT** **4** **GHI** **5** **JKL** **1**. Press **1** to turn off voice privacy capability and notifications or press **2** **ABC** to turn on voice privacy capability and notification. When sending a call, **VPActive** is displayed if the voice privacy selection is turned on, enhanced voice privacy is available through the cellular service provider, and voice privacy security is active for the call in progress. When sending a call, **VPInactive** is displayed if the voice privacy selection is turned on; but voice privacy is not available through the cellular service provider or voice privacy security is inactive for the call in progress. Contact your cellular provider for the availability of voice privacy.

Select System | Menu Shortcut |

When your telephone is initially activated, your cellular service provider programs (or instructs you to program) your phone with system information including your telephone number. The information programmed into your phone is referred to as the Number Assignment Module or NAM.

Your cellular phone can be programmed with two different telephone numbers or NAMs. (See "Select Phone Number" on page 23.) Note that only one phone number or NAM can be active at one time.

During activation, your phone is also set up on your cellular service provider's network. The network your phone uses is referred to as the Home system. Whenever possible, your phone accesses the Home system; however, if you are outside of the home cellular service area, your phone attempts to locate an available system. Locating an available system is referred to as roaming. The call air time rate on roam systems is usually more expensive than the call air time rate on your home system. You can, however, limit your phone's access to roam systems through your system selection setting.

To set the system selection, press **MENU/SELECT** **4** **GHI** **5** **JKL** **2** **ABC**.

Select one of the following system settings.

Standard

Press **1** to set your system selection to Standard (Home and Roam). The Standard setting allows the phone to first search for an available channel in the home system. If the phone cannot find an available channel in the home system, the phone searches for an outside or roam system. The roam indicator, **R**, and the roam system type indicator, **H** or **R**, are displayed when your phone accesses an outside or roam system.

Home Only

Press **2** to set the system selection to Home Only. The Home Only setting restricts the phone to search for an available channel in the home system only. If the phone cannot locate an available channel in the home system, the phone enters a no service status until a channel within the home system is again located.

System A Only

Press **3** to set the system selection to System A only. The System A only setting restricts the phone to search for an available channel in the home system or a roam system within System A Only.

System B Only

Press **4** to set the system selection to System B only. The System B Only setting restricts the phone to search for an available channel in the home system or a roam system within System B Only.

Select Phone Number | **Menu Shortcut** |

Your phone can be programmed with up to two phone numbers. If two phone numbers are programmed into the phone, you can select the desired phone number to use by pressing **MENU/SELECT** **4** **GHI** **5** **JKL** **3** **DEF**. Press **↑** or **↓** to highlight the phone number selection (No.1 or No. 2.). Press **END** to exit the select phone number menu.

Clock | **Menu Shortcut** |

Set Clock | **Menu Shortcut** |

The clock can be set with the time, date, and year. See "Setting the Time and Date" on page 8.

Set Alarm, Auto On, Auto Off | **Menu Shortcut** |

Your phone can be used as an alarm clock, and your phone can be set to automatically turn on or off at a specified time each day. To access the alarm or the auto on/off selections, press **MENU/SELECT** **4** **GHI** **6** **MNO** **2** **ABC**.

Alarm

Set Alarm: With the Auto On/Auto Off/Alarm setting screen displayed, press or until ALM is flashing; press . If the alarm has been previously set, the last alarm time setting is automatically displayed. Press to advance to the hour field. Key in hour; press . Key in minutes; press . Use to specify a (for a.m.) or p (for p.m.). Press to save the alarm time setting and exit the set alarm menu. The alarm icon () appears on the standby mode display. The alarm sounds at the specified time setting.

Turn Off Alarming Phone: Press to turn off the phone alarm when it sounds.

Deactivate Alarm Prior to Alarming: To turn off the alarm setting prior to the specified alarm time, press and press or until ALM is flashing. Press to cancel alarm time; press to exit the set alarm menu.

Auto Power On/Auto Power Off

Set Auto Power On/Auto Power Off: With the Auto On/Auto Off/Alarm setting screen displayed, press or until either ON or OFF is flashing; press . If the auto power selection has been previously set, the last auto power setting is automatically displayed. Press to advance to the hour field. Key in hour; press . Key in minutes; press . Use to specify a (for a.m.) or p (for p.m.). Press to save the auto power on or auto power off setting and exit the menu. The phone automatically turns on or turns off each day at the specified time setting.

Deactivate Auto Power On/Auto Power Off: To deactivate the auto power on or auto power off setting, press , and press or until either ON or OFF is flashing. Press to cancel the auto power on or auto power off time; press to exit the menu.

Environment

Menu Shortcut

One-Touch Dialing

Menu Shortcut

The one-touch dialing feature allows you to quickly speed dial a phone number by pressing only one key. With one-touch dialing turned on, phone numbers stored in phone book locations 1 through 9 can be dialed by pressing and holding the corresponding key on the keypad. To turn on one-touch dialing, press . Press to turn on the one-touch dialing selection or press to turn off the one-touch dialing selection. See “Add to Phone Book” on page 12 for phone book storing information.

Fixed Digit Dialing

Menu Shortcut

The type of outgoing calls made from your phone can be restricted by using fixed digit dialing. For example, the fixed digit dialing selection can be set to 7 digits to restrict the

outgoing calls to local phone numbers. To set the fixed digit dialing selection, press **MENU/SELECT** **4** **GHI** **7** **PQRS** **2** **ABC**. As prompted on the display, enter the 4-digit password. Type in a specified number of digits for restricting outgoing calls; for example, press **7** **PQRS** to restrict outgoing calls to 7-digit numbers. The range is 0 to 26 digits. Press **MENU/SELECT** to save setting; press **END** to exit the fixed digit dialing menu. If a call is attempted to a phone number exceeding the restricted fixed digit setting, the following message is displayed:

ExtraDig DialedPressCLR

Language **MENU/SELECT** **4** **GHI** **7** **PQRS** **3** **DEF**

The phone display language can be set to English, Spanish, or French. To change the display language selection, press **MENU/SELECT** **4** **GHI** **7** **PQRS** **3** **DEF**. Press **1** to select English, press **2** **ABC** to select Spanish, or **3** **DEF** to select French. Press **MENU/SELECT**. The phone automatically powers off and then powers on again in the selected display language.

Wakeup Message **MENU/SELECT** **4** **GHI** **7** **PQRS** **4** **GHI**

A personal message, referred to as a wakeup message, can be stored and displayed briefly each time your phone is turned on. To store a wakeup message, press **MENU/SELECT** **4** **GHI** **7** **PQRS** **4** **GHI**. Using the table under "Add to Phone Book" on page 12, type in the message using the phone keys. Press **MENU/SELECT** to save the message and exit the wakeup message menu.

Handsfree **MENU/SELECT** **4** **GHI** **8** **TUV**

The following menu selections - handsfree switch, backlight, and automatic answer - can only be activated when the phone is used with a handsfree adapter.

Handsfree Switch **MENU/SELECT** **4** **GHI** **8** **TUV** **1**

When your phone is connected to an in-vehicle handsfree adapter, two phone features are available for some vehicle installation configurations. If available, the features can be activated by pressing **MENU/SELECT** **4** **GHI** **8** **TUV** **1**. Press **2** **ABC** to enable call alert, **3** **DEF** to enable radio mute, or **1** to disable the call alert or radio mute feature. Press **END** to exit the handsfree switch menu.

Backlight | Menu Shortcut |

When your phone is connected to an in-vehicle handsfree adapter, the keypad and display backlight can be set to remain illuminated continuously. To select the backlight setting, press **MENU/SELECT** **4** **GHI** **8** **TUV** **2** **ABC**. Press **2** **ABC** for the phone backlight to remain on continuously in a handsfree configuration or press **1** to turn it off. Press **END** to exit the backlight menu.

Auto Answer | Menu Shortcut |

When your phone is connected to an in-vehicle handsfree adapter, the phone can be set for automatic answering of incoming calls. To activate the automatic answer setting, press **MENU/SELECT** **4** **GHI** **8** **TUV** **3** **DEF**. Press **2** **ABC** to turn on automatic answering or press **1** to turn off automatic answering. Press **END** to exit the auto answer menu.

Reset Settings | Menu Shortcut |

The current phone selections can be cleared and reset to the factory default settings. To reset the phone settings, press **MENU/SELECT** **4** **GHI** **9** **WXYZ**. As prompted, enter the 4-digit password. Press **2** **ABC** to reset all selections to the default settings or press **1** to maintain the current settings. Press **END** to exit the reset settings menu.

5. Lock/Unlock Keypad | Menu Shortcut |

Your phone keypad can be easily and quickly locked to prevent inadvertent key pressing when the phone is turned on. Press **MENU/SELECT** **5** **JKL** to lock keypad; press **MENU/SELECT** **5** **JKL** again to unlock keypad. If a key is pressed when the keypad is locked, the following message is displayed:



KeyPad is locked . Use MENU 5 to Unlock

Note that even with the keypad locked, you can still dial 911 and press **SEND** to call for emergency services.

 
 

6. Silent Mode

Menu Shortcut

The Silent Mode Menu can be accessed by pressing  . The Silent Mode Menu is displayed below.



```
Silent
mode
1.Off
2.On
```

By setting the phone to the silent mode, all phone alerts are turned off; an incoming call is indicated only by the keypad and LED flashing, and the incoming call notification appearing on the display. With the silent mode menu displayed, press  to turn off silent mode or press  to turn on silent mode. Press  to exit the silent mode menu.



7. Non Pub(lic) Mode

Menu Shortcut

The Non-Public Mode Menu can be accessed by pressing  . The menu is displayed below.

```
Private
Mode Menu
1.Acquire
New System
-----
2.Search
for System
3.View
Stored
Systems
```



 
Use  and  to scroll through and view the entire Private Mode Menu

In addition to operating on a cellular network system, your phone is also capable of operating on a non-public or private telephone system. Note that the phone user must first subscribe or have rights to a non-public or private telephone system to utilize the following private mode menu selections - Acquire New System, Search for System, and View Stored Systems.

Acquire New System

Menu Shortcut

The phone automatically searches or scans for the first available private network system by pressing   . The following message is displayed:

SearchInProgress...

If a system is located, the phone returns to the standby state with the private system's descriptive name or label displayed. The private system is now available for use and is stored into the phone system database. If a system is not located, the following message is displayed:

NoSystemsFound

Press **CLR** to exit the acquire new system selection.

Search for System | Menu Shortcut

MENU/SELECT **7 PQRS** **2 ABC**

You can set your phone to manually search for available private network systems by pressing **MENU/SELECT** **7 PQRS** **2 ABC**. The following message is displayed:

SearchInProgress...

If systems are located, the phone displays a list of the available systems. Use **↑** and **↓** to scroll through the list; press **END** to save the selected system. The phone returns to the standby mode with the private system's descriptive name or label displayed. The private system is now available for use and is stored in the phone system database. If no systems are located, the following message is displayed:

NoSystemsFound

Press **CLR** to exit the search for system selection.

View Stored Systems | Menu Shortcut

MENU/SELECT **7 PQRS** **3 DEF**

System information of each located private system is stored in the phone system database. The contents of the database can be viewed by pressing **MENU/SELECT** **7 PQRS** **3 DEF**. A list of the systems is displayed. Use **↑** and **↓** to scroll through the list; press **END** to exit the database. If there is no information stored in the database, the following message is displayed:


DataBaseEmptyPressCLR

Press **CLR** to exit the view stored systems selection.

8. Digits Editing



Menu Shortcut

 8TUV

The Digits Editing Menu can be accessed by pressing  8TUV. The Digits Editing Menu is displayed below.

```


Digits
editing
1.Manual
  Pause
-----
2.Auto
  Pause
3.Link to
  Phone book
-----
  
```



Use  and  to scroll through and view the entire Digits Editing Menu

Automated telephone systems prompt you through a recorded message to enter a set or sets of identifying numbers such as a credit card account number, bank account number, or personal identification number. You can use your phone to easily dial or store multiple sets of numbers, for accessing automated systems, by separating the sets of digits with indicators referred to as pause marks. Pause marks alert your phone to wait or pause before sending the remaining sets of digits. There are two types of pause marks: manual and automatic. The two types are described below.



Manual Pause

Menu Shortcut

 8TUV 1

When entering the digits of an automated system telephone number and any additional strings of numbers needed to communicate with the system, you can insert manual pauses between the sets of digits. To enter manual pause marks, enter in the telephone number; press  8TUV 1. A "P" is displayed after the phone number. Enter in the next set of digits. If necessary, press  8TUV 1 to insert another manual pause and then enter in the next set of digits. When the automated system telephone number is dialed, your phone waits to transmit the sets of numbers following a manual pause mark. The following message is displayed:

PressSNDForManualPauseDial

As prompted by the automated system, press  to send the next set of digits. Continue to press  to send any remaining sets of digits.

Auto Pause | Menu Shortcut

An automatic pause can be inserted between sets of digits in a similar manner as manual pauses. To enter automatic pause marks, enter in the telephone number; press **MENU/SELECT** **8** **TUV** **2** **ABC**. A “,” (comma) is displayed after the phone number. Enter in the next set of digits. If necessary, press **MENU/SELECT** **8** **TUV** **2** **ABC** to insert another automatic pause and then enter in the next set of digits. When the automated system telephone number is dialed, your phone waits approximately three seconds at each automatic pause mark and then automatically transmits the remaining sets of digits.

Link to Phone Book | Menu Shortcut

If the total number of digits needed to access an automated telephone system exceeds the maximum 26 digits that can be transmitted at one time (or stored in each phone book location), the phone number can be entered and then linked to a phone book location containing the remaining strings of numbers. To link a phone number to a phone book record location, key in the phone number and press **MENU/SELECT** **8** **TUV** **3** **DEF**; an “L” is displayed. Enter the phone book location (1-99) containing the applicable information. Press **SEND** to dial the phone number. After the phone number is dialed, the following message is displayed indicating that the remaining sets of digits must be sent manually by pressing **SEND**.

PressSNDForManualPauseDial

9. Mute | Menu Shortcut

The Mute Menu can be accessed by pressing **MENU/SELECT** **9** **WXYZ** during a conversation. The Mute Menu is displayed below.

```
Set mute
1.Mic Mute
2.All Mute
3.Unmute
```

Mic Mute | Menu Shortcut

The phone microphone can be turned off or muted during a conversation. With a call in progress, press **MENU/SELECT** **9** **WXYZ** **1**. Press **MENU/SELECT** **9** **WXYZ** **3** **DEF** to turn on the microphone again.

All Mute | Menu Shortcut

The phone microphone and earpiece can be turned off or muted during a conversation. With a call in progress, press

MENU/SELECT **9** **WXYZ** **2** **ABC**. Press **MENU/SELECT** **9** **WXYZ** **3** **DEF** to turn on the microphone and earpiece again.

Unmute | Menu Shortcut

The microphone mute and full mute settings can be cancelled by pressing **MENU/SELECT** **9** **WXYZ** **3** **DEF**.

0. Lock Phone | Menu Shortcut

Your phone can be locked to prevent unauthorized use. To lock your phone, press **MENU/SELECT** **0** **OPER**. As prompted, enter your 4-digit password. The Lock Phone Menu is displayed.

```

Lock Phone
Menu
1 . Lock
2 . Unlock
  
```

Press **1** to lock your phone; press **END** to exit the lock menu. When the phone is set to lock, the lock icon (🔒) is displayed. To unlock the phone, press **MENU/SELECT** **0** **OPER**. As prompted, enter your 4-digit password. Press **2** to unlock your phone; press **END** to exit the lock menu. If the phone is unlocked, the lock icon (🔒) is not displayed.

Chapter 4: Safety & Performance

Safety Precautions

For safe and efficient operation of the phone, observe the following guidelines.

The cellular telephone is a radio transmitter and receiver. When the unit is powered on, the phone receives and sends radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 894 MHz, and employs commonly used frequency modulation (FM) techniques. When the phone is in use, the cellular system handling the call controls the power level at which the phone transmits. The power level can range from 0.006 watt to 0.6 watt.

Exposure to Radio Frequency Energy

In 1991, the Institute of Electrical and Electronics Engineers (IEEE) and in 1992, the American National Standards Institute (ANSI) adopted a standard for safe levels of human exposure to RF energy. Approximately 120 scientists, engineers, and physicians from universities, government, and industry developed the standard. In March 1993, the Federal Communications Commission (FCC) proposed the adoption of the standard. The design of your phone complies with the updated standard. RF exposure can be further limited by controlling the duration of calls and operating the phone in a power efficient manner.

Efficient Phone Operation

Extend the antenna fully to operate at the lowest power level possible. Calls can be sent and received with the antenna retracted; however, the phone operates more efficiently with the antenna fully extended. Hold the cellular phone in the same manner as a standard telephone is held. While speaking directly into the mouthpiece, position the antenna up and over your shoulder. Do not hold the antenna when the phone is in use. Holding the antenna affects call quality and may cause the phone to operate at a higher power level than is necessary.

Antenna Care and Replacement

Do not use a phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn could result. Replace a damaged antenna immediately with a manufacturer-approved antenna. Use only an NEC supplied or approved antenna. Unauthorized antennas, modifications, or attachments could damage the phone and could violate FCC regulations.

Driving

Obey the laws and regulations on the use of cellular telephones while driving. When using your phone while driving:

- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions require additional caution.

Electronic Devices

Most modern electronic equipment is shielded from RF energy; however, RF energy from cellular telephones may affect some inadequately shielded electronic equipment. RF energy may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with manufacturers or manufacturers representatives to determine if systems are adequately shielded from external RF energy. Consult the manufacturer of any personal medical devices (for example, pacemakers and hearing aids) to determine if the devices are adequately shielded from external RF energy. Turn off the phone in health care facilities when any regulations posted in the area forbid use of electronic devices. Hospitals or health care facilities may be using equipment sensitive to external RF energy.

Aircraft

- Turn off the phone before boarding any aircraft.
- While the plane is on the ground, receive approval from the airline crew prior to using the cellular phone.
- Do not use the phone while the plane is in the air.

To prevent possible interference with aircraft systems, Federal Aviation Administration (FAA) regulations require airline crew permission prior to phone usage. To prevent interference with cellular systems, FCC regulations prohibit using the phone while an aircraft is in the air.

Children

Do not allow children to play with the phone; the phone is not a toy. Children could hurt themselves or others. In addition, children could damage the phone or make calls that result in an increase to the phone bill.

Blasting Areas

To avoid interfering in construction projects, turn off the phone when in a blasting area or in areas posted: "Turn Off Two-Way Radio." Construction crews often use remote control RF devices to set off explosives.

Air Bags

An air bag inflates with incredible force. Do not place objects, including installed and portable wireless equipment, in the area of the air bag or in deployment area of the air bag. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Potentially Explosive Atmospheres

Turn off the phone in an area with a potentially explosive atmosphere. Although it is rare, the phone or its accessories could generate sparks. Sparks in certain areas could cause an explosion of fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are usually, but not always, clearly marked. Potentially explosive areas include fueling areas such as gas stations, below deck on boats, and fuel or chemical transfer and storage facilities. Additional areas are atmospheres with chemicals or particles in the air such as grain, dust, or metal powders; and any area where it is advised to turn off the vehicle engine.

Do not transport or store flammable gas, liquids, or explosives in the same compartment that contains the phone or its accessories.

Vehicles using liquefied petroleum gas, such as propane or butane, must comply with the National Fire Protection Standard (NFPA-58). For a copy of the standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Pacemakers

Research sponsored by Wireless Technology Research (WTR) indicates that some wireless telephones cause interference with pacemakers. NEC America, Inc., endorses the following recommendations:

- Wireless phones should be kept at a safe distance from a pacemaker. Existing data indicate that the greater the distance between a pacemaker and a wireless phone, the less the risk of interference. The data further indicates that six inches is the proper separation distance for minimal risk.
- Practical steps to achieve the recommended separation distance include not placing a wireless telephone in the area over the pacemaker, such as a shirt pocket, when the phone is powered on. (The unit is considered on when power is being supplied to the phone by the battery.) Another practical step is to listen into the phone using the ear opposite the location of the pacemaker.
- Note that no comprehensive data indicates that bystanders with pacemakers are at risk of interference from another person operating a cellular phone.

Phone Performance

Technical Information

Dimensions (without antenna)	147.32 x 50.8 x 27.94mm 5.8" x 2.0" 1.1"
Weight	8.42 ounces (NiCd battery) 8.78 ounces (NiMH battery)
Transmitting Power	0.6 W max. ERP
Operating Voltage	4.8V
Frequency Band	824.040 - 848.970 MHz (TX) 869.040 - 893.970 MHz (RX)
Standard Battery Capacity	1000 mAh (NiCd) 1300 mAh (NiMH)
Number of Channels	832
Memory Locations	99
Memory Capacity	26 numeric digits per location 10 letters per location

Battery Care & Disposal

Your phone battery is a sealed unit with no serviceable parts inside; do not attempt to open the case. To ensure the maximum life from your battery, allow the battery to fully discharge at least once a week. To fully discharge the battery, leave the phone turned on until the message

RECHARGE BATTERY

is displayed and the phone shuts itself off. If left unused, a fully charged battery discharges in approximately one month. Store batteries uncharged in a cool, dark, and dry place.

DO NOT PLACE USED BATTERIES IN YOUR REGULAR TRASH. NICKEL CADMIUM (NiCd) BATTERIES MUST BE COLLECTED, RECYCLED, OR DISPOSED OF IN AN ENVIRONMENTALLY SOUND MANNER.

The incinerating, landfilling, or mixing of nickel-cadmium (NiCd) batteries with municipal solid waste stream is **PROHIBITED BY LAW** in most states. Return batteries to a federal or state approved nickel-cadmium (or sealed lead) battery recycler. Possible locations include the location the battery was purchased or local sellers of automotive batteries. In all states except Minnesota, call 1-800-822-8837 for further disposal information, if necessary. In Minnesota, call 1-800-225-PRBA. Contact local waste management officials for additional information on the environmentally sound collection, recycling, and disposal of batteries.

Chapter 5: Warranty & Service

Limited Warranty

1. What Products May Be Covered By This Limited Warranty?

The following products (the "Products" or the "Product") purchased through an NEC America, Inc. (NECAM), Wireless Communications Division Authorized Dealer (the "Dealer") in the United States on or after January 1, 1997, may be covered by this warranty:

[DIGITALTALK MAX™ 2100 CELLULAR TELEPHONE]

2. What Does This Warranty Cover?

NECAM warrants to the original end-user Product purchaser ("You") that the Products will conform to the applicable published specifications in effect at the time of shipment from NECAM to the Dealer, and that the Products will be free from defects in materials or workmanship under normal use and service during the warranty period described in Paragraph 4.

3. When Does Your Warranty Begin?

The warranty period will begin on the date You purchase the product. Dated proof of purchase is necessary to accompany and product returned for warranty service consideration. Valid proof of purchase must identify the point of purchase, date of purchase, Product model or trade name, and Electronic Serial Number or Mechanical Serial Number for transceivers and boosters.

4. How Long Does The Coverage Last?

The warranty period for the Product is:

[ONE (1) YEAR]

Any Products repaired or replaced under the terms of this warranty are covered under the warranty for the remainder of the original warranty period or ninety (90) days from the date of service return shipping, whichever is longer.

5. What Will The Manufacturer Do If The Product Becomes Defective In Materials Or Workmanship During The Warranty Period?

If any Product covered under this warranty becomes defective in materials or workmanship during the applicable warranty period, NECAM will, at its option, either repair the defective product without charge for parts and labor, or provide a replacement in exchange for the defective Product.

6. What Is Not Covered By This Warranty?

- (a) This warranty does not extend to:
- (i) Products which have been subjected to misuse, accident, physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion, or;
 - (ii) Products which have been damaged due to repair, altered, or modified by anyone other than an authorized service warranty component-level representative of NECAM, or;
 - (iii) Defects caused by components, parts, or accessories not compatible with the warranted Product, or;
 - (iv) Products whose warranty/quality labels, product serial number plates or electronic serial numbers have been removed, altered, or rendered illegible, or;

- (v) Accessory items such as antenna, cables, curl cords, cases, etc., or;
- (vi) Products shipped to NECAM for repair from outside the United States.
- (b) Any other warranties, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, shall be limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
- (c) NECAM's total liability for damages for any cause related to or arising out of the use or inability to use the product, whether in contract, negligence, strict tort, or based on any other legal theory, shall not exceed the original price paid for the product.
- (d) In no case shall NECAM be liable for any indirect, special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict tort, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of savings or revenues, inability to use the products or any associated equipment, cost of capital, cost of any substitute equipment, facilities or services, claims by third parties other than you, and injury to property. These limitations do not apply to claims for personal injury. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

7. How Do You Get Warranty Service?

If Your Product requires warranty service, it must be returned to an NEC Authorized Service Center along with a description of the Product malfunction or difficulty. You are required to substantiate warranty status with a dated proof of purchase (as explained in item #3), inclusive of Products's serial number (if applicable). The address of the nearest NECAM Authorized Service Center may be obtained by calling (800) 637-5917 or (972) 751-7500, or by writing to: NEC America, Inc., Attention: Service Support & Administration, 1621 Walnut Hill Lane, Irving, Texas, 75038. NECAM assumes no risk for damage or loss in transit. If, in NECAM's sole opinion, the Product failure is not covered under this warranty, or proof of purchase does not meet the terms of this warranty, you will be notified and your authorization will be requested for any further repair activity. Products repaired under warranty will be returned to You, transportation prepaid.

8. How Does State Law Apply To This Warranty?

This warranty gives You specific legal rights, and You may also have other rights which vary from state to state.

9. This Warranty Is The Entire Agreement.

Unless modified in writing, signed by both You and NECAM, this warranty is understood to be the complete and exclusive agreement.

REV: LW012097

NEC Service Support

NEC Service Support can assist you with any additional information that you may need in the operation your NEC cellular telephone and NEC Authentic Accessories™. Contact NEC Service Support at the following telephone number or address.

Telephone:

1-800-637-5917*
1-972-751-7500

Writing:

NEC America, Inc.
Service Support
1621 Walnut Hill Lane
Irving, Texas 75038

*The 800 number listed above also provides access to NEC Repair Service and Parts Sales.

NEC Wireless Marketing

NEC Wireless Marketing can be contacted at the following address or telephone number.

Telephone:

1-800-421-2141

Writing:

NEC America, Inc.
Wireless Marketing Division
1621 Walnut Hill Lane
Irving, Texas 75038

Copyright © 1998 by NEC America, Inc.
Manual Part Number: 621-0317
1st Edition November 1998

All Rights Reserved. Printed in U.S.A.

All specifications and conditions subject to change without notice.

LICENSED UNDER ONE OR MORE OF THE FOLLOWING U.S. PATENTS
4,954,951 4,942,516 4,896,260 4,829,419 4,825,364 4,686,622 4,531,182
4,396,976 4,371,923 4,121,284 4,120,583 4,435,732 4,471,385 4,672,457
4,739,396 4,675,863 4,817,089 4,912,705 5,022,024 5,121,391

Index

- A**
- Acquire New System 27
 - Activation, Phone 1
 - Add to Phone Book 12
 - Adding Numbers from a Call Log to the Phone Book 12
 - Adding Numbers from Scratchpad to the Phone Book 12
 - Adjusting
 - Earpiece Volume 7
 - Keypad Volume 7
 - Air Time 11
 - Alarm 24
 - Deactivate 24
 - Set 24
 - Turn Off 24
 - All Mute 30
 - Analog Call Type 18
 - Answering a Call 6
 - Any Key Answer 6, 18
 - Audio 21
 - Authentic Accessories 1
 - Auto
 - Answer 26
 - Lock 18
 - Pause 30
 - Power On/Power Off 24
 - Deactivate 24
 - Set 24
 - Turn Off 24
- B**
- Backlight 26
 - Basic Operations 5
 - Battery
 - Care & Disposal 35
 - Charging 2
 - Connecting 1
 - Disconnecting 1
 - Locking Latch 1
 - Battery Charge Indicator 5
- C**
- Call 18
 - Analog/Digital Type 18
 - Answering 6
 - Any Key Answer 18
 - Digital & Analog Channels 19
 - Ending 6
 - Placing 6
 - Call Waiting 6
 - Caller Identification 6
 - Cellular Phone Number, Viewing 8
 - Charging the Battery 2
 - Charging Times, Battery 2
 - Checking Signal Strength 5
 - Clear
 - All Text Messages 17
 - Call Logs & Air Time Counter 11
 - Phone Book 13
 - Clock 23
 - clock, setting 8
 - Connecting Battery 1
 - Correcting Digit Entry Error 6
- D**
- Date, Setting 8
 - Dialed Calls Log 10
 - Dialing 6
 - Fixed Digit 24
 - Number stored in Phone Book 6
 - One-Touch 24
 - Digit Entry Error, Correcting 6
 - Digital Call Type 18
 - Display Icons 3
 - Display, Standby Mode 5
 - DTMF
 - Length 19
 - On or Off 20
 - transmit 20
- E**
- Enabled or Disabled Word Wrap 21
 - Ending a Call 6
 - Environment 24
 - Escalating alert 21
- F**
- Fixed Digit Dialing 24
- G**
- Getting Started 1
- H**
- Handsfree 25
 - Handsfree Switch 25
 - Home Only System 23
- I**
- Indicator, Battery Charge 5
- K**
- Keypad Volume, Adjusting 7
- L**
- Language 25
 - Last Number Dialed, Calling 6
 - Limited Warranty 36
 - Link to Phone Book 30
 - Lock 18
 - Auto 18
 - Keypad 26
 - Lock/Unlock Keypad 26
 - Phone 31
 - Locking Latch, Battery 1
 - Locking the Phone Book 13
 - Log
 - Dialed Calls 10
 - Missed Calls 10
 - Received Calls 10
 - Long Tone Use 19
- M**
- Main Menu 9
 - Manual Pause 29
 - Marketing, NEC Wireless 38
 - Menu 0 Lock Phone 31
 - Menu 1 Call Logs 10
 - Menu 3 Message 14
 - Menu 4 Settings 17
 - Menu 5 Lock/Unlock Keypad 26
 - Menu 6 Silent Mode 27
 - Menu 7 Non Pub(lic) Mode 27
 - Menu 8 Digits Editing 29
 - Menu 9 Mute 30
 - Menu Navigation Keys 4
 - Menu Tree Overview 4
 - Message
 - Wakeup 25
 - Messages
 - Text 2, 15
 - Voice 2, 14
 - Mic Mute 30
 - Missed Calls Log 10
 - Mode
 - Non Public 27
 - Silent 27

Index

Standby	5	Service Support	38
Mute		Set (Change) Password	18
All	31	Set Alarm, Auto On, Auto Off	23
Microphone	30	Set Clock	23
Unmute	31	Setting Ringer Volume	7
N		Settings	
Navigation, Menu	9	Reset	26
Network	22	Short Tone Use	19
O		Signal Strength, Checking	5
One-Touch Dialing	24	SMS Menu	16
P		Sort Order	21
Password		Speed Dialing	24
Change	18	Standard System	23
Phone	2	Standby Mode Display	5
Set	18	Store As Voice Mail Number	17
Pause		Storing Voice Mail Number	8
Auto	30	System	
Manual	29	Acquire New	27
Performance, Phone	1	Search for	28
Phone		View Stored	28
Turning Off	5	System A Only	23
Turning On	5	System B Only	23
Phone Activation	1	T	
Phone Book		Technical Information	35
Add to	12	Text Message	20
Adding Numbers from a		Text Message Viewer	16
Call Log	12	Text Messages	2, 15
Adding Numbers from		Alert	15
Scratchpad	12	Clear All	17
Clearing	13	Displayed Notification	15
Locking	13	Types	15
Using	8	Viewer	16
View by Location	13	Time, Setting	8
View By Name	13	Tone	
View By Phone Number	13	length	19
Phone Layout	3	short & long	19
Phone Number		transmit DTMF	20
Dialing Number Stored in		Transmit DTMF Tone	20
Phone Book	6	Turning Off Phone	5
Select	23	Turning On Phone	5
Viewing Your	8	U	
Phone Password	2	Unmute	30
Phone Performance	35	Using Phone Book	8
Phone Safety & Performance	1	V	
Phone, Turning Off	5	View	
Phone, Turning On	5	by (Phone) Number	13
Placing a Call	6	by Location	13
R		by Name	13
Received Calls Log	10	Stored Systems	28
Reset Settings	26	Your Phone Number	8
Retrieving Voice Mail	8	Voice Channels/Call Types	19
Ring Alert	6	Voice Mail	
Ring type	21	Retrieving	8
Ring volume	21	Store As Number	17
Ringer		Storing Number	8
Type, Selecting	7	Voice Mail Messages	2
Volume, Setting	7	Voice Messages	14
Roll Off Order	20	Voice Privacy	22
S		Volume	
Safety & Performance	32	Adjusting Earpiece	7
Safety Precautions	32	Adjusting Keypad	7
Safety, Phone	1	Keys	7
Search for System	28	W	
Secured Conversation	22	Wakeup Message	25
Select Phone Number	23	Warranty	36
Select System	22	Word Wrap	20
Selecting Ringer Type	7		
Service	36		

Quick Reference Guide

Basic Function	Operation
Turn On/Off Phone	Press and hold PWR for approximately two seconds.
Place A Call	Key in phone number; press SEND .
Answer A Call	Press SEND .
End A Call	Press END .
View Own Phone Number	Press CLR .
Access Phone Book	Press ☰ to scroll through names; press SEND to call.
Access Main Menu	Press MENU/SELECT .
Navigate in Menus	Press ☰ and ☷ .
Exit Menu	Press END .
Store Voice Mail Phone Number	Key in voice mail phone number; press MENU/SELECT 3 DEF 4 GHI .
Retrieve Voice Mail	Press ☰ 1 .
Retrieve Text Messages	Press ☰ 2 ABC .
Set Time and Date	Press MENU/SELECT 4 GHI 6 MNO 1 . Key in hour; press ☷ . Key in minutes; press ☷ . Press MENU/SELECT to select a.m. or p.m. Key in month (1-12); press ☷ . Key in day (1-31); press ☷ . Key in year; press END .
Lock/Unlock Phone Keypad	Press MENU/SELECT 5 JKL .
Adjust Earpiece Volume	During a call, press ▲ to increase or ▼ to decrease.
Adjust Keypad Volume	With the phone in the standby mode, press ▲ to increase or ▼ to decrease.

Menu Overview

<div>MENU SELECT</div>	Main Menu	
<div>MENU SELECT</div> 1	Call Logs	
<div>MENU SELECT</div> 11		Dialed
<div>MENU SELECT</div> 12 ABC		Received
<div>MENU SELECT</div> 13 DEF		Missed
<div>MENU SELECT</div> 14 GHI		Air Time
<div>MENU SELECT</div> 15 JKL		Clear Call Logs & Air Time Counter
<div>MENU SELECT</div> 2 ABC	Phone Book	
<div>MENU SELECT</div> 2 ABC1		Add to Phone Book
<div>MENU SELECT</div> 2 ABC2 ABC		View by Name
<div>MENU SELECT</div> 2 ABC3 DEF		View by Location
<div>MENU SELECT</div> 2 ABC4 GHI		View by Number
<div>MENU SELECT</div> 2 ABC5 JKL		Lock Phone Book
<div>MENU SELECT</div> 2 ABC6 MNO		Clear Phone Book
<div>MENU SELECT</div> 3 DEF	Messages	
<div>MENU SELECT</div> 3 DEF1		Voice Messages
<div>MENU SELECT</div> 3 DEF2 ABC		Text Messages
<div>MENU SELECT</div> 3 DEF3 DEF		Clear All Text Messages
<div>MENU SELECT</div> 3 DEF4 GHI		Store Voice Mail Phone Number
<div>MENU SELECT</div> 4 GHI	Settings	
<div>MENU SELECT</div> 4 GHI1		Lock
<div>MENU SELECT</div> 4 GHI2 ABC		Call
<div>MENU SELECT</div> 4 GHI3 DEF		Text Message
<div>MENU SELECT</div> 4 GHI4 GHI		Audio
<div>MENU SELECT</div> 4 GHI5 JKL		Network
<div>MENU SELECT</div> 4 GHI6 MNO		Clock
<div>MENU SELECT</div> 4 GHI7 PQRS		Environment
<div>MENU SELECT</div> 4 GHI8 TUV		Handsfree
<div>MENU SELECT</div> 4 GHI9 WXYZ		Reset settings
<div>MENU SELECT</div> 5 JKL	Lock Keypad	
<div>MENU SELECT</div> 6 MNO	Silent Mode	
<div>MENU SELECT</div> 6 MNO1		Off
<div>MENU SELECT</div> 6 MNO2 ABC		On
<div>MENU SELECT</div> 7 PQRS	Non Public Mode	
<div>MENU SELECT</div> 7 PQRS1		Acquire New System
<div>MENU SELECT</div> 7 PQRS2 ABC		Search for System
<div>MENU SELECT</div> 7 PQRS3 DEF		View Stored Systems
<div>MENU SELECT</div> 8 TUV	Digits Editing	
<div>MENU SELECT</div> 8 TUV1		Manual Pause
<div>MENU SELECT</div> 8 TUV2 ABC		Auto Pause
<div>MENU SELECT</div> 8 TUV3 DEF		Link to Phone Book
<div>MENU SELECT</div> 9 WXYZ	Mute (In Conversation)	
<div>MENU SELECT</div> 9 WXYZ1		Mic Mute
<div>MENU SELECT</div> 9 WXYZ2 ABC		Mic and Earpiece Mute
<div>MENU SELECT</div> 9 WXYZ3 DEF		Unmute
<div>MENU SELECT</div> 0 OPER	Lock Phone	
<div>MENU SELECT</div> 0 OPER1		Lock
<div>MENU SELECT</div> 0 OPER2 ABC		Unlock